

8620 Ring Scanner

For Dolphin 70e/75e Wearable Solution

Quick Start Guide

Aller à www.honeywellaidc.com pour le français.

Vai a www.honeywellaidc.com per l'italiano.

Gehe zu www.honeywellaidc.com für Deutsch.

Ir a www.honeywellaidc.com para español.

Para Português, acesse www.honeywellaidc.com.

Перейти на русскоязычный сайт www.honeywellaidc.com.

Pro češtinu jdi na www.honeywellaidc.com.

Pre slovenčinu choď na www.honeywellaidc.com.

Türkçe için lütfen www.honeywellaidc.com sayfasını ziyaret ediniz.

Idź na stronę : www.honeywellaidc.com po quick start w języku polskim.



查看中文简体版请登陆 www.honeywellaidc.com

查看繁体版请登陆 www.honeywellaidc.com

انتقل إلى www.honeywellaidc.com للغة العربية.




Wearable Ring Scanner

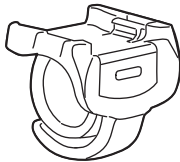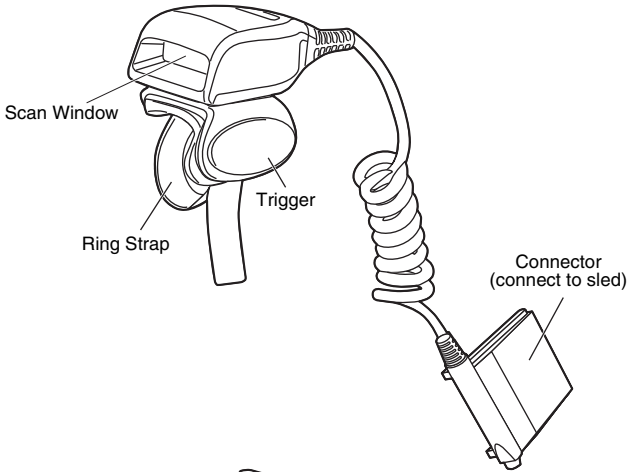


Optional C-Ring to replace Ring Strap. Available in two sizes: Small and large.

Trigger Rotation

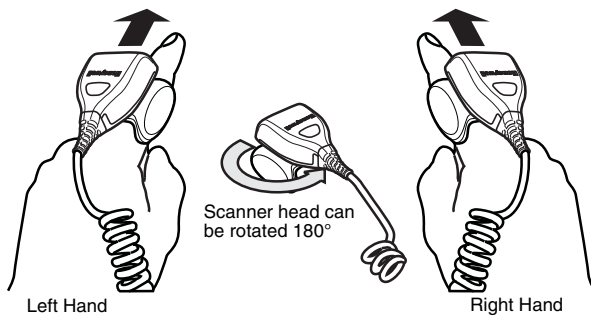

Connect Scanner to Arm Mount Sled



Slide the ring scanner cable connector into the bottom of the sled until the connector ring clicks shut.

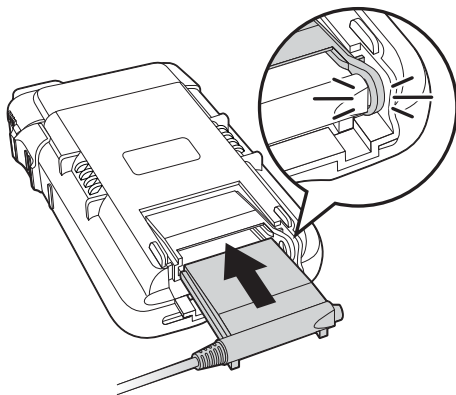


Attach Ring to Finger

1. Remove shipping film off the scanner window.
2. Slide finger into loosened ring strap.
3. Pull ring strap to secure ring to finger.

Note: If using the C-ring simply slide on to finger.

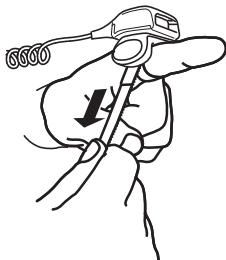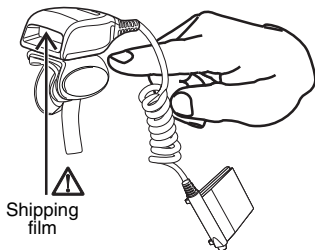

The ring cable should not cross under the hand.

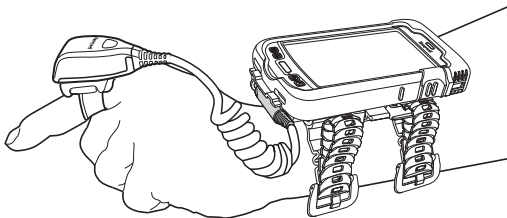

How to Scan a Bar Code

Note: For WEH6.5 and WE8H, you must have a scanning application open on your terminal for the ring scanner to be able to scan. See the Wearable Solution User's Guide for your terminal on our website at www.honeywellaidc.com for more information.


Linear bar codes:






2-D bar codes:



WARNING: Do not stare directly in to the laser beam.


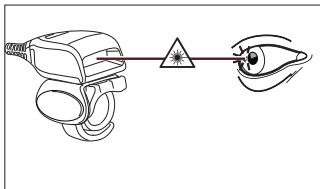


Wrist Position When Scanning

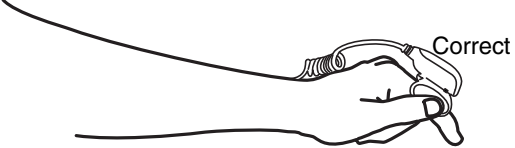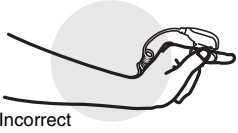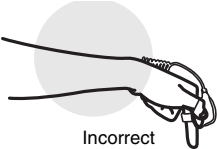


Remove Ring Strap/C-Ring


1. Turn the scanner 90°.

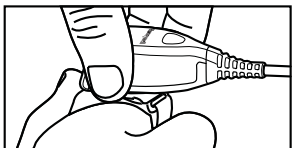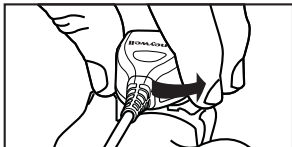

2. Press latch down.

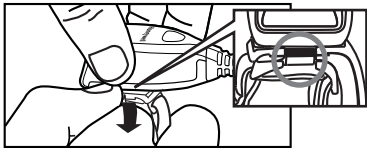


3. Remove the ring strap or c-ring.

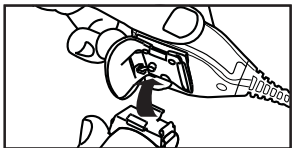


Replace Ring Strap/C-Ring


1. Connect ring latch with trigger catch.

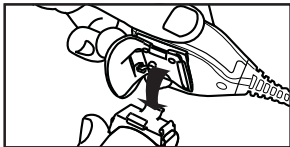


2. Press together until a click occurs.

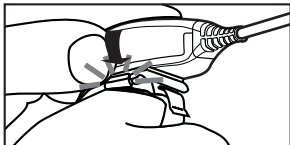

3. Turn 90°.

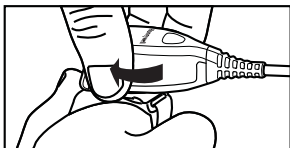


4. Ready to scan.

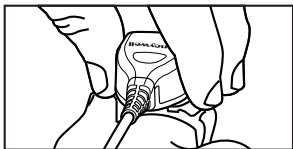


Remove Trigger


1. Remove ring strap or c-ring.

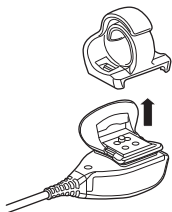

2. Unscrew the 4 screws.

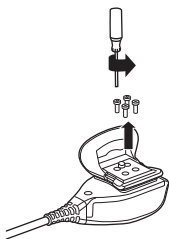


3. Remove trigger.

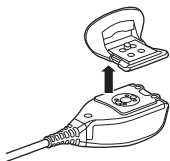


Replace Trigger


1. Place trigger on the scanner.

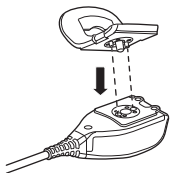

2. Screw in the 4 screws to secure the trigger.

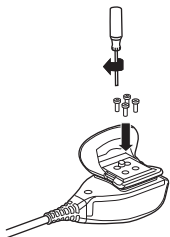

3. Snap on ring strap or c-ring.

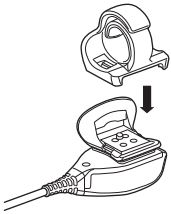

Technical Assistance

Contact information for technical support, product service, and repair can be found at www.honeywellaidc.com.

User Documentation

For localized versions of this document, and to download the User's Guide, go to www.honeywellaidc.com.

Limited Warranty

Refer to www.honeywellaidc.com/warranty_information for your product's warranty information.

Patents

For patent information, please refer to www.hsmpats.com.

Disclaimer

Honeywell International Inc. ("HII") reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult HII to determine whether any such changes have been made. The information in this publication does not represent a commitment on the part of HII.

HII shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of HII.

© 2015-2016 Honeywell International Inc. All rights reserved.

Web Address: www.honeywellaidc.com

