

Test & Service Sheet for MUSEO 2D Platform

UNLINK from BASE
(GM4400/GBT4400/PM9500/PBT9500)



Restore **Factory** Configuration

USA Factory Configuration (**Default**)



The Label ID is affected from this selection!

EU Factory Configuration



The Label ID is affected from this selection!

Common Interface Options

Activate
USB-Keyboard



Set Country Mode
German (**Default U.S.**)



Activate USB-Keyboard ALT-Mode
No country code needed!



Activate
USB-Com



Activate RS232 with
9600-8-N-1 [CR] (**Default Retail**)
115200-8-N-1 [CR] (**Default Industrial**)



Set Baudrate to
9600-8-N-1 [CR]



Set Baudrate to
115200-8-N-1 [CR]



Enable or Disable Scripting (Advanced Formatting)

Enable



Disable (**Default**)



Please disconnect scanner from Aladdin before!

Common Service Codes

REBOOT SCANNER
(GM4400/GBT4400/PBT9500/PM9500)



TURN OFF SCANNER
(GM4400/GBT4400/PBT9500/PM9500)



SW RELEASE SCANNER



TO SEE THE SW RELEASE FROM THE BASE, YOU HAVE TO INSTALL OUR CONFIGURATION SUITE [ALADDIN](#). THEN CONNECT THE BASE USING USB-COM OR RS232.

For many devices in one room, please increase **RADIO PROTOCOL TIMEOUT** (GM4400/PM9500)

Radio Protocol Timeout 5 Sec



Radio Protocol Timeout 2 Sec (**Default**)



Enable 2/5 Interleaved (06-50 digits)

Enable



Testbarcode:



12345678

Disable EAN/GS1-128 AIM-ID **JC1**



Max 2D Decoding Timeout



Testbarcode for German Keyboard

(Output must be **yyy-ZZZ-yyy**)



yyy-ZZZ-yyy

Terminator Selection

(This settings are valid for RS-232, USB-Com & USB-KBD interface type)

DISABLE



[CR] / ENTER (**DEFAULT MUSEO DEVICES**)



[CRLF] / ENTER ENTER (**DEFAULT ORIGINAL DL DEVICES**)



[HT] / TAB



Reading Parameters / Beeper Settings

OFF



LOW



MEDIUM



HIGH



Radio Parameters / Radio Beeper Settings

LOW



MEDIUM



HIGH



Disable Motion Aiming Control

(Automatic Laser Aiming will be disabled)



Set Powerdown Timeout to 10 minutes

(Default 30 minutes)



Enable PICK Mode

(Central Code only)



Disable PICK Mode

