


MC17

Bezel Replacement Instructions

The plastic bezel that covers the display can be replaced if broken or to install a customer specific bezel.

1. Place the mobile computer on a desktop with the display facing down.
2. Using a T6 Torx drive, remove two screws securing the bezel to the housing.
3. Align the replacement bezel on the housing.
4. Using a T6 Torx drive, secure the bezel to the housing using the two Torx screws.
5. Torque the screws to 2.5 ± 0.2 kgf-cm (2.17 ± 0.17 in-lbs.). Do not over tighten.

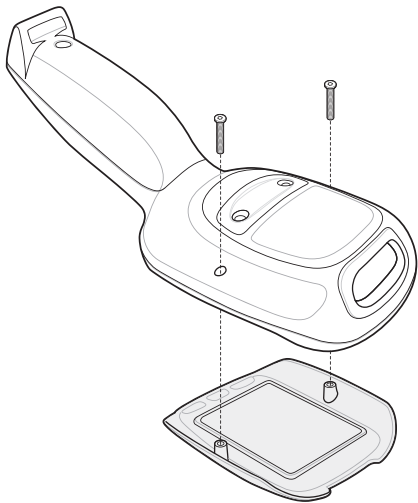

72-101936-02 Revision A - February 2015

Zebra Technologies Corporation
Lincolnshire, IL U.S.A.
<http://www.zebra.com>