 


## Introduction

The TRG5500 Trigger Handle adds a gun-style handle with a scanning trigger to the MC55/MC65 Enterprise Digital Assistants (EDAs). It increases comfort when using the EDA in scan-intensive applications for extended periods of time.

For detailed information on the MC55 and MC65 EDA, refer to the *MC55 User Guide* or the *MC65 User Guide*.

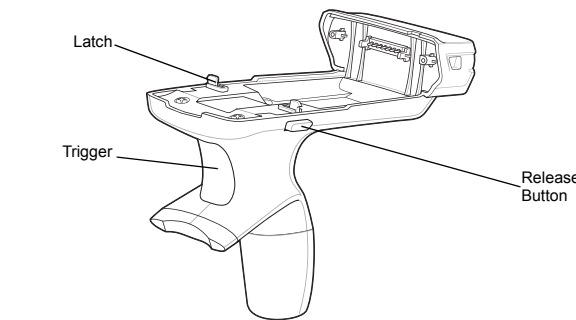

 
## Install Trigger Handle Software on MC5574/90

In order to use the Trigger Handle with the MC5574/90, software installation is required. Download the *Trigger Handle Software V1.0* file from the Zebra Support Central web site: <http://www.zebra.com/support>. Follow the directions provided with the software and install the file onto the device using ActiveSync. Refer to the *MC55 Integrator Guide* for instruction on installing software.

Note that on MC55 devices with Windows Mobile 6.1, if installing MSR software, install the MSR software first and then install the Trigger Handle software.


## Inserting the MC55/65 into the Trigger Handle

Slide the MC55/65 into the Trigger Handle until it locks in place. The latches secure the MC55/65 to the Trigger Handle.

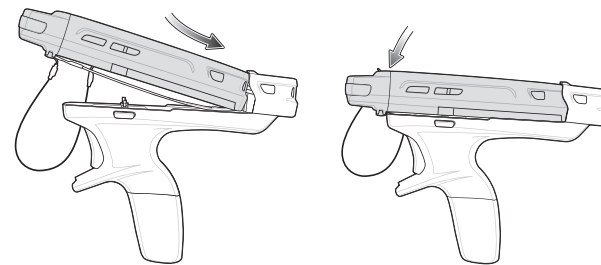

## Removing the MC55/65

 To remove the MC55/65, press the release buttons and pull the MC55/65 forward.

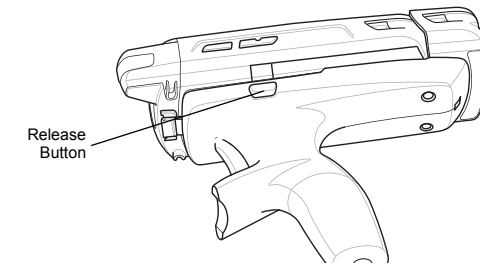


## Scanning

To scan bar codes:

- ✓ **NOTE** A scanning application must be installed prior to scanning a bar code.

1. Start the MC55/65's scanning application.
2. Aim the MC55/65 at the bar code.
3. Press the trigger on the handle. The Scan/Decode LED lights and a beep sounds to indicate a successful decode.

 For more information on MC55/65 scanner functions, refer to the *MC55 User Guide* or the *MC65 User Guide*.

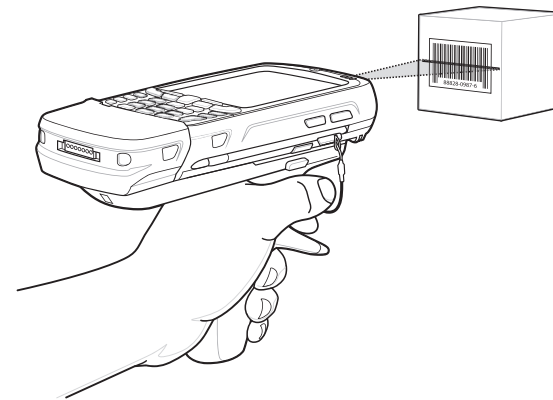


## Charging and Communication

The Trigger Handle can be used to charge the MC55/65 and communicate with a host computer using either the Serial Charging Cable or a cradle, or connect to a peripheral such as a printer.

### Using the Serial Charging/Communication Cable

 To charge the MC55/65's battery or communicate with a host computer while the MC55/65 is in the Trigger Handle, use the Serial Charging Cable setup below:

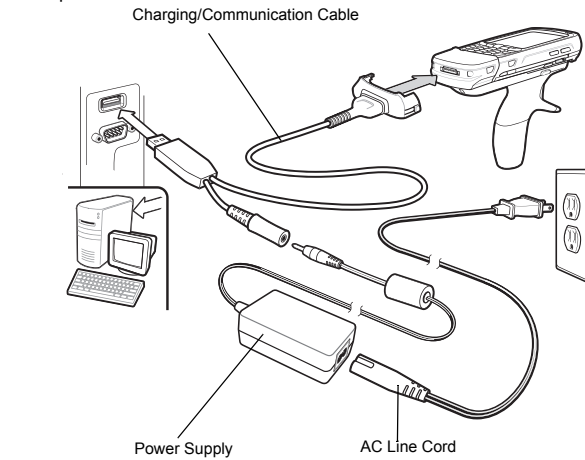


## Using a Cradle



**CAUTION** Do not place a Trigger Handle with an attachment, such as a Magnetic Stripe Reader (MSR) into a cradle. Remove the attachment before inserting the Trigger Handle into the cradle.

 
To charge the MC55/65's battery while the MC55/65 is in the Trigger Handle, use either the Single-Slot Serial/USB cradle or the Four-Slot cradle.

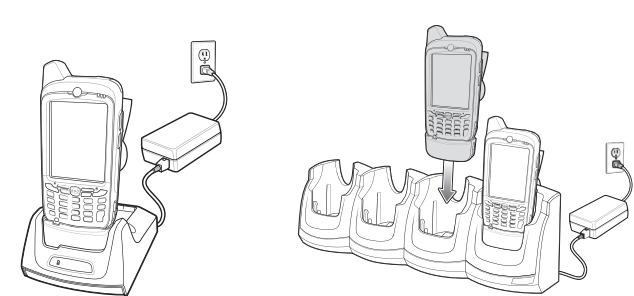

## Handle Extension Replacement

The TRG5500 includes a replaceable short handle extension. To change the handle extension:

 1. Remove screw securing the handle extension.
2. Remove handle extension.
3. Place short handle extension over handle.
4. Secure short extension handle using screw.

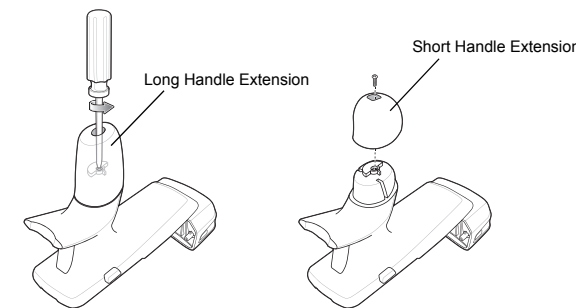

Zebra reserves the right to make changes to any product to improve reliability, function, or design. Zebra does not assume any product liability arising out of, or in connection with, the application or use of any product, circuit, or application described herein. No license is granted, either expressly or by implication, estoppel, or otherwise under any patent right or patent, covering or relating to any combination, system, apparatus, machine, material, method, or process in which Zebra products might be used. An implied license exists only for equipment, circuits, and subsystems contained in Zebra products.

## Service Information

If you have a problem using the equipment, contact your facility's Technical or Systems Support. If there is a problem with the equipment, they will contact the Zebra Support Center at: <http://www.zebra.com/support>.

For the latest version of this guide go to: <http://www.zebra.com/support>.

## Warranty

For the complete Zebra hardware product warranty statement, go to: <http://www.zebra.com/warranty>.



Zebra Technologies Corporation  
Lincolnshire, IL, U.S.A.  
<http://www.zebra.com>

Zebra and the Zebra head graphic are registered trademarks of ZIH Corp. The Symbol logo is a registered trademark of Symbol Technologies, Inc., a Zebra Technologies company.  
© 2015 Symbol Technologies, Inc. All Rights Reserved.



## Troubleshooting

Problem	Cause	Solution
Scan line does not appear when trigger is pressed.	MC55/65 is not attached properly to the Trigger Handle and is not making contact with the connector.	Remove the MC55/65 from the Trigger Handle and reinsert.
	MC55/65 does not contain a scanning application.	Load a scanning application on the MC55/65. Refer to the <i>MC55 Integrator Guide</i> or <i>MC65 Integrator Guide</i> .
	Scanning application is not active.	Start the scanning application.
	MC55 Trigger Setting not installed or set properly.	See Install Trigger Settings Software on MC55/65 for instructions on installing the software.
MC55/65 battery does not charge when Trigger Handle is placed in a cradle.	Trigger Handle is not properly seated in the cradle. Power is not available to the cradle.	Remove the Trigger Handle from the cradle and reinsert. Ensure that power connections to the cradle are connected properly.
Cannot print to printer.	Printer cable not connected properly.	Ensure cable is connected properly to the printer and Trigger Handle.
MC55/65 does not wake from suspend mode when trigger is pressed.	The trigger only wakes the MC55/65 from the suspend mode if a scanning application is active.	Press a key on the MC55/65 to wake from the suspend mode.

Refer to the *MC55 User Guide* or the *MC65 User Guide* for specific troubleshooting procedures.

## Regulatory Information

This guide applies to Model Number TRG5500. All Zebra devices are designed to be compliant with rules and regulations in locations they are sold and will be labeled as required. Local language translations are available at the following website: <http://www.zebra.com/support>.  
For use only with Zebra approved and UL Listed mobile computers. Zebra approved and UL Listed accessories and/or Zebra approved and UL Listed/Recognized battery packs. Do NOT attempt to charge damp/wet mobile computers or batteries. All components must be dry before connecting to an external power source. Declared maximum operating temperature: 50°C.

## Health and Safety Recommendations

### Ergonomic Recommendations



**CAUTION** In order to avoid or minimize the potential risk of ergonomic injury follow the recommendations below. Consult with your local Health & Safety Manager to ensure that you are adhering to your company's safety programs to prevent employee injury.

- Reduce or eliminate repetitive motion
- Maintain a natural position
- Reduce or eliminate excessive force
- Keep objects that are used frequently within easy reach
- Perform tasks at correct heights
- Reduce or eliminate vibration
- Reduce or eliminate direct pressure
- Provide adjustable workstations
- Provide adequate clearance
- Provide a suitable working environment
- Improve work procedures.

### Power Supply

Use ONLY a LISTED, Type no. 50-14000 (5.4Vdc/ 3A) or PWRS-14000 (5.4Vdc/ 3A), Direct Plug-In Power supply, marked Class 2 or LPS (IEC60950-1, SELV). Use of alternative power supply will invalidate any approvals given to this unit and may be dangerous.

## Waste Electrical and Electronic Equipment (WEEE)

**English:** For EU Customers: All products at the end of their life must be returned to Zebra for recycling. For information on how to return product, please go to: <http://www.zebra.com/weee>.

**Français:** Clients de l'Union Européenne : Tous les produits en fin de cycle de vie doivent être retournés à Zebra pour recyclage. Pour de plus amples informations sur le retour de produits, consultez : <http://www.zebra.com/weee>.

**Español:** Para clientes en la Unión Europea: todos los productos deberán entregarse a Zebra al final de su ciclo de vida para que sean reciclados. Si desea más información sobre cómo devolver un producto, visite: <http://www.zebra.com/weee>.

**Bulgarian:** За клиенти от ЕС: След края на ползването им живот всички продукти трябва да се връщат на Zebra за рециклиране. За информация относно връщането на продукти, моля отидете на адрес: <http://www.zebra.com/weee>.

**Deutsch:** Für Kunden innerhalb der EU: Alle Produkte müssen am Ende ihrer Lebensdauer zum Recycling an Zebra zurückgesandt werden. Informationen zur Rücksendung von Produkten finden Sie unter <http://www.zebra.com/weee>.

**Italiano:** per i clienti dell'UE: tutti i prodotti che sono giunti al termine del rispettivo ciclo di vita devono essere restituiti a Zebra al fine di consentirne il riciclaggio. Per informazioni sulle modalità di restituzione, visitare il seguente sito Web: <http://www.zebra.com/weee>.

**Português:** Para clientes da UE: todos os produtos no fim de vida devem ser devolvidos à Zebra para reciclagem. Para obter informações sobre como devolver o produto, visite: <http://www.zebra.com/weee>.

**Nederlands:** Voor klanten in de EU: alle producten dienen aan het einde van hun levensduur naar Zebra te worden teruggezonden voor recycling. Raadpleeg <http://www.zebra.com/weee> voor meer informatie over het terugzenden van producten.

**Polski:** Klienci z obszaru Unii Europejskiej: Produkty wycofane z eksploatacji należy zwrócić do firmy Zebra w celu ich utylizacji. Informacje na temat zwrotu produktów znajdują się na stronie internetowej <http://www.zebra.com/weee>.

**Čeština:** Pro zákazníky z EU: Všechny produkty je nutné po skončení jejich životnosti vrátit společnosti Zebra k recyklaci. Informace o způsobu vrácení produktu najdete na webové stránce: <http://www.zebra.com/weee>.

**Eesti:** EL klientidele: kõik tooted tuleb nende eluea lõppedes tagastada taaskasutamise eesmärgil Zebra'ile. Lisainformatsiooni saamiseks toote tagastamise kohta külastage palun aadressi: <http://www.zebra.com/weee>.

**Magyar:** Az EU-ban vásárlóknak: Minden tönkrement terméket a Zebra vállalathoz kell eljuttatni újrahasznosítás céljából. A termék visszajuttatásának módjával kapcsolatos tudnivalókról látogasson el a <http://www.zebra.com/weee> weboldalra.

**Slovenski:** Za kupce v EU: vsi izdelki se morajo po poteku življenjske dobe vrniti podjetju Zebra za reciklažo. Za informacije o vračilu izdelka obiščite: <http://www.zebra.com/weee>.

**Svenska:** För kunder inom EU: Alla produkter som uppnått sin livslängd måste returneras till Zebra för återvinning. Information om hur du returnerar produkten finns på <http://www.zebra.com/weee>.

**Suomi:** Asiakkaat Euroopan unionin alueella: Kaikki tuotteet on palautettava kierrätettäväksi Zebra-yhtiöön, kun tuotetta ei enää käytetä. Lisätietoja tuotteen palauttamisesta on osoitteessa <http://www.zebra.com/weee>.

**Dansk:** Til kunder i EU: Alle produkter skal returneres til Zebra til recirkulering, når de er udtjent. Læs oplysningerne om returnering af produkter på: <http://www.zebra.com/weee>.

**Ελληνικά:** Για πελάτες στην Ε.Ε.: Όλα τα προϊόντα, στο τέλος της διάρκειας ζωής τους, πρέπει να επιστρέφονται στην Zebra για ανακύκλωση. Για περισσότερες πληροφορίες σχετικά με την επιστροφή ενός προϊόντος, επισκεφθείτε τη διεύθυνση <http://www.zebra.com/weee> στο Διαδίκτυο.

**Malti:** Għal klijenti fl-UE: il-prodotti kollha li jkun u waslu fl-aħħar tal-hajja ta' l-użu tagħhom, iridu jiġu rritornati għand Zebra għar-riċiklaġġ. Għal aktar taġħrif dwar kif għandek tirritorna l-prodott, jekk jogħġbok zur: <http://www.zebra.com/weee>.

 
**Slovenčina:** Pre zákazníkov z krajín EU: Všetky výrobky musia byť po uplynutí doby ich životnosti vrátené spoločnosti Zebra na recykláciu. Bližšie informácie o vrátení výrobkov nájdete na: <http://www.zebra.com/weee>.

**Lietuvių:** ES vartotojams: visi gaminiai, pasibaigus jų eksploatacijos laikui, turi būti grąžinti utilizuoti į kompaniją „Zebra“. Daugiau informacijos, kaip grąžinti gaminį, rasite: <http://www.zebra.com/weee>.

**Latviešu:** ES klientiem: visi produkti pēc to kalpošanas mūža beigām ir jānogādā atpakaļ Zebra atreizējai pārstrādei. Lai iegūtu informāciju par produktu nogādāšanu Zebra, lūdzu, skatiet: <http://www.zebra.com/weee>.

## TURKISH WEEE Statement of Compliance

EEE Yönetmeliğine Uygundur

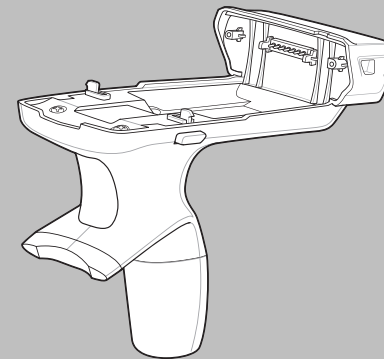

# TRG5500 TRIGGER HANDLE USER GUIDE