
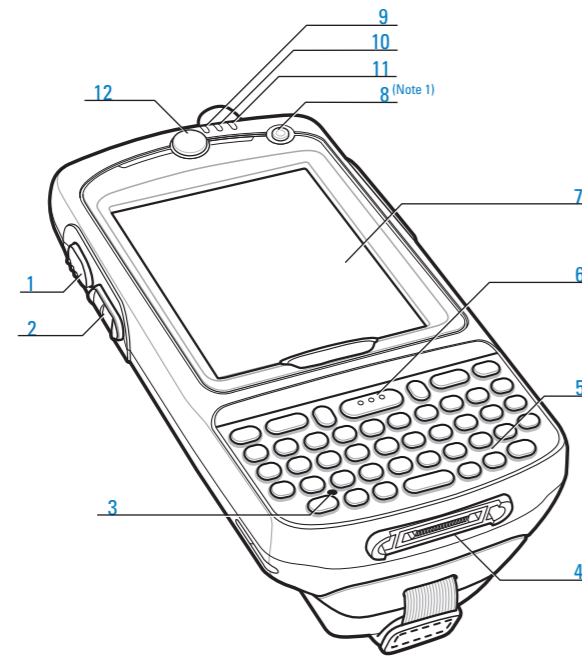


MC75

Quick Start Guide


FEATURES

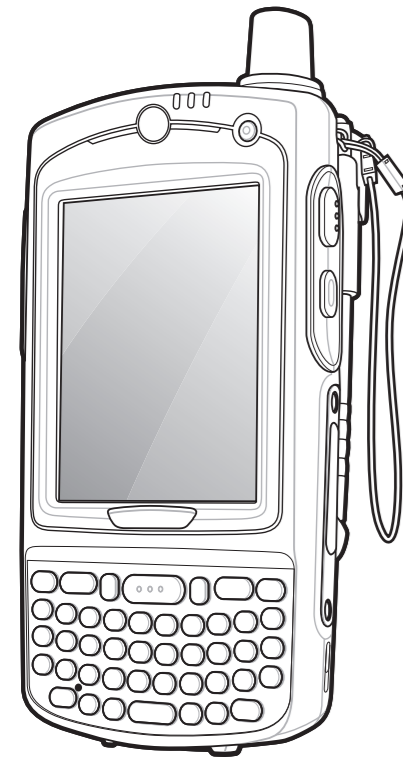

- 1 Scan/Action Button
- 2 Up/Down Button
- 3 Microphone
- 4 I/O Connector
- 5 Keypad
- 6 Scan/Action Button
- 7 Touch Screen (with screen protector)
- 8 Power Button
- 9 Scan/Decode LED
- 10 Charging/Battery Status LED
- 11 Radio Status LED
- 12 Phone Speaker


Note 1: To reset the MC75, press and hold the Power button for five (5) seconds.

- 13 Battery Door
- 14 Handstrap
- 15 Handstrap Slot
- 16 Headset Jack
- 17 Camera Flash
- 18 Camera
- 19 Speaker
- 20 Exit Window (see Data Capture Options)
- 21 Stylus
- 22 Tether Point
- 23 Scan/Action Button
- 24 Action Button
- 25 Back Housing Bracket
- 26 Memory Card Cover
- 27 IrDA Window
- 28 Battery Door Latch

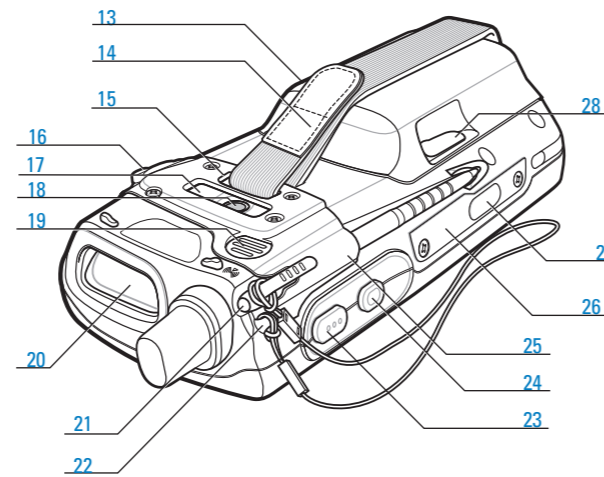


KEYPADS

- 1 Talk
- 2 Soft Key
- 3 Navigation
- 4 Scan/Action Button
- 5 End
- 6 Orange Key
- 7 Backlight
- 8 Blue Key
- 9 OK
- 10 Phonepad*
- 11 Menu*
- 12 Start Menu

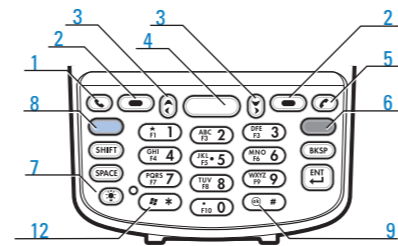


- 1 Talk
- 2 Soft Key
- 3 Navigation
- 4 Scan/Action Button
- 5 End
- 6 Orange Key
- 7 Backlight
- 8 Blue Key
- 9 OK
- 10 Phonepad*
- 11 Menu*
- 12 Start Menu

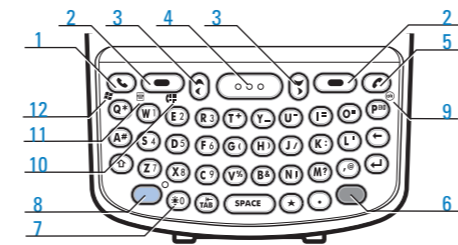



* Alpha-numeric keypad only.

Blue Key


Use this key to launch applications and select items (shown on the keypad in blue).
> Press the  key once to activate this mode followed by another key.

Orange Key

Use this key to access the secondary layer of characters and actions.
> Press the  key once to lock the keypad in the Alpha state.
> Press the  key a second time to return to the normal state.


GETTING STARTED

1 Insert the Battery

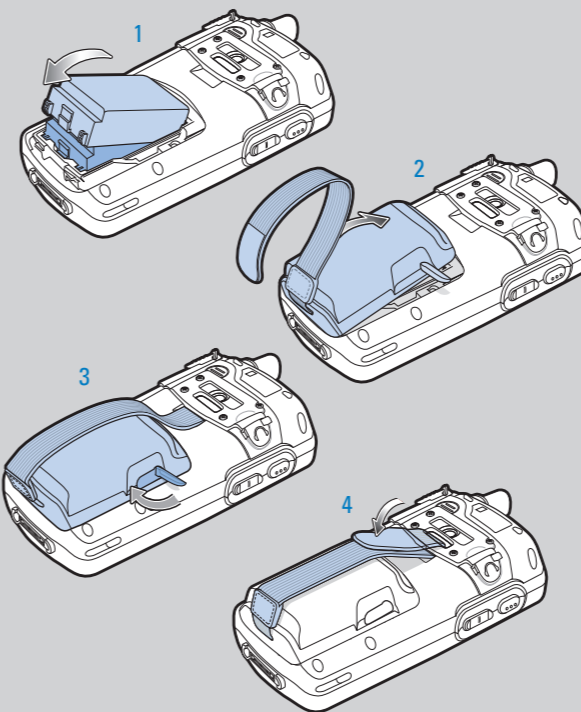

Note 2: 3600 mAh capacity battery and door shown.

2 Charge the MC75 24hr*

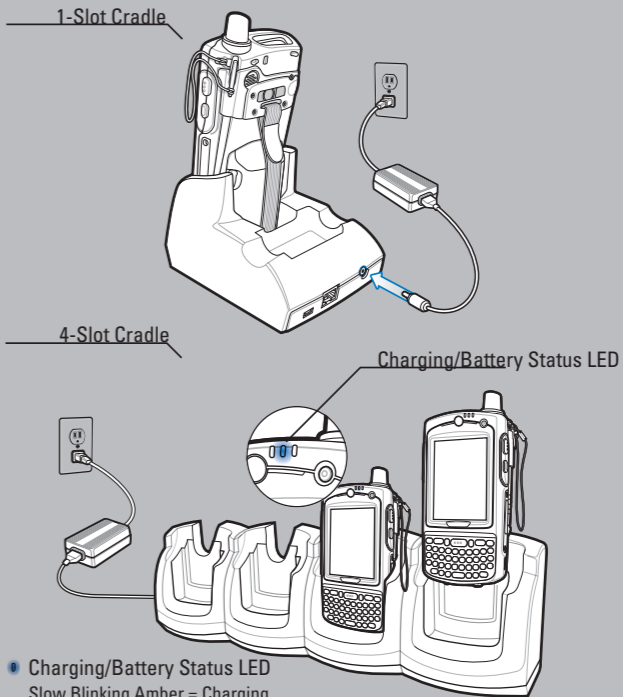

Charging/Battery Status LED


- Slow Blinking Amber = Charging
- Solid Amber = Fully Charged
- Fast Blinking Amber = Charging Error

* It is recommended that this product be charged for 24 hours before the first use to ensure that the internal battery is fully charged.

3 Install ActiveSync®

Download ActiveSync® 4.5 or higher from <http://www.microsoft.com> and follow the instructions to install ActiveSync onto the host computer.

4 Communicate with Host

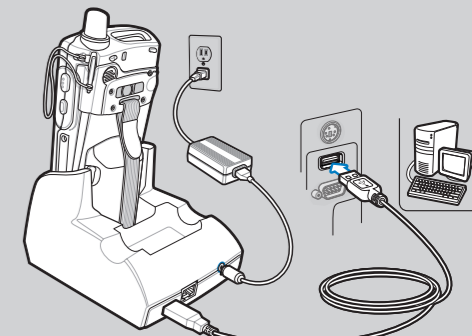

5 Create a Partnership

Follow the on-screen ActiveSync instructions to establish a connection between the MC75 and the host computer.

More Information on the MC75

Visit the Zebra Web site at <http://www.zebra.com/mc75>

Setting up, using and troubleshooting the MC75

MC75 User Guide
MC75 Integrator Guide

Available at: <http://www.zebra.com/mc75>

Additional Software

Check Zebra web site for approved applications.
<http://www.zebra.com/mc75>

Connecting and synchronizing with the host computer

ActiveSync® Help on the host computer. To view help, start ActiveSync®, Click Help - Microsoft ActiveSync Help.

Information on using programs on the MC75

Tap Start - Help within the specific program.

Service and Warranty

MC75 Regulatory Guide



Zebra Technologies Corporation
Lincolnshire, IL U.S.A.


Zebra and the stylized Zebra head are trademarks of ZIH Corp., registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners.

©2015 ZIH Corp and/or its affiliates. All rights reserved.




72-103079-03 Rev. A — March 2015

SIM Card Installation (Located Under Battery) (MC75X6 only)

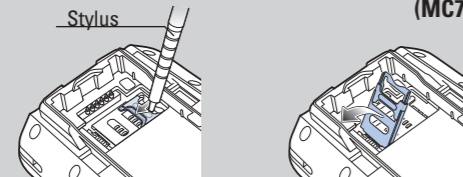

1 Use stylus to open door

2 Lift door

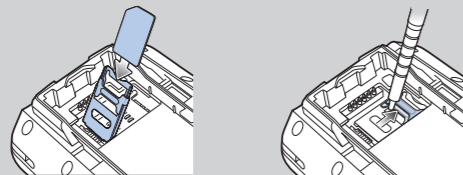

3 Place SIM card with contacts facing down


4 Snap door closed

5 Replace battery and door

6 Ensure Phone is turned on

7 Press red Power button for five seconds to warm boot


MicroSD Card Installation

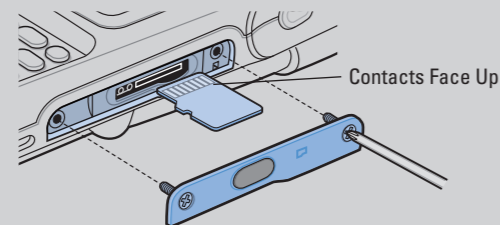

Contacts Face Up

<http://www.zebra.com/mc75>

Screen Protector

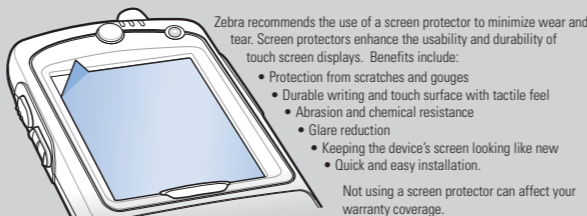


Zebra recommends the use of a screen protector to minimize wear and tear. Screen protectors enhance the usability and durability of touch screen displays. Benefits include:

- Protection from scratches and gouges
- Durable writing and touch surface with tactile feel
- Abrasion and chemical resistance
- Glare reduction
- Keeping the device's screen looking like new
- Quick and easy installation.

Not using a screen protector can affect your warranty coverage.


An initial screen protector is already applied to your MC75. Contact your local account manager or Zebra for more information and purchasing details. Part number: KT-67525-01R Screen Protector 3/pk.

Vehicle Cradle

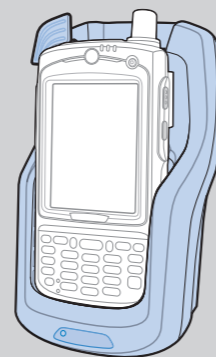

Charge in Cradle



3600 mAh Capacity Battery: ~ 5 hours
4800 mAh Capacity Battery: ~ 7 hours

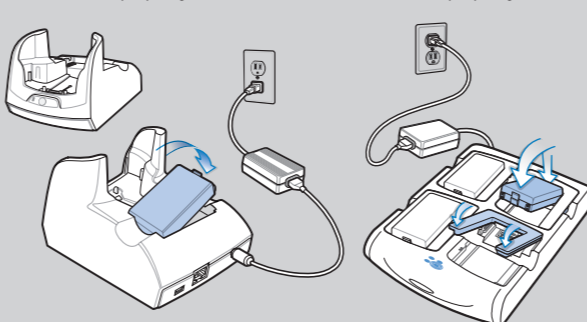

Spare Battery Charger

Flashing Amber: Battery charging
Solid Amber: Battery fully charged

Snap-On Accessories

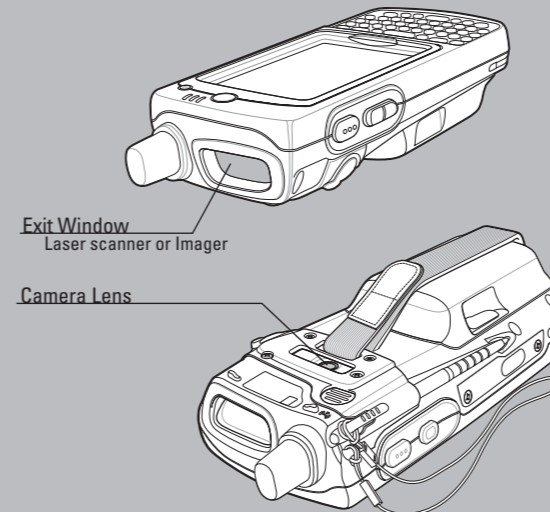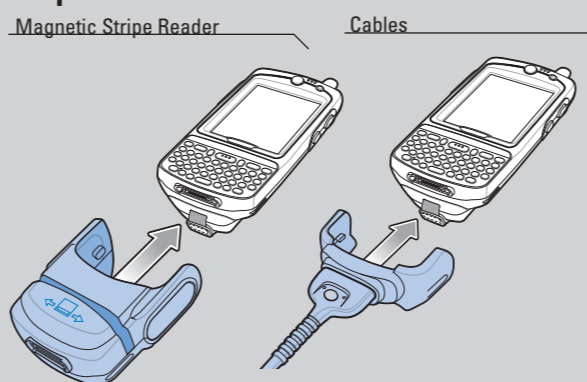

Exit Window
Laser scanner or Imager


Camera Lens

GPS INFORMATION


When using the GPS feature of the MC75:

- Acquiring satellite signals may take a few minutes. It is best to be outside and have a clear, unobstructed view of the sky.
- Without a clear view, acquisition takes much longer and could result in the MC75 being unable to compute the initial position quickly.
- Obtain a satellite fix before moving.
- Shutdown GPS application when not in use.



Scanning/Imaging

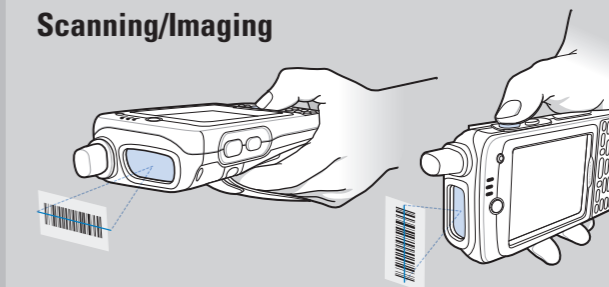

Scanning

 

Imaging

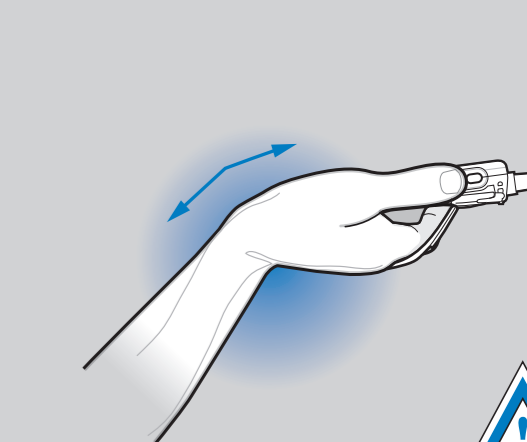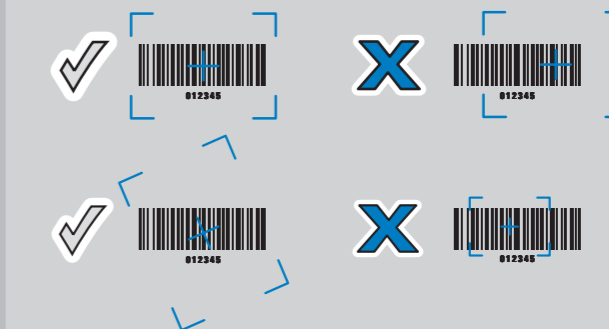

AVOID EXTREME WRIST ANGLES

