
CONTENTS OF THE BOX

One of the following Vehicle Cradles: ST1000 (Unpowered) or ST1002 (Powered)




This guide along with additional documentation (dependent on order).


OPTIONAL ACCESSORIES

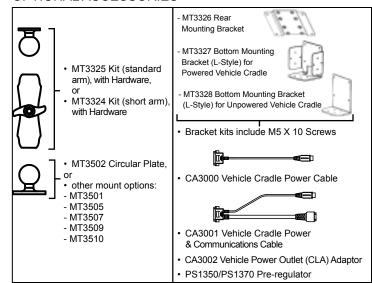


FEATURES

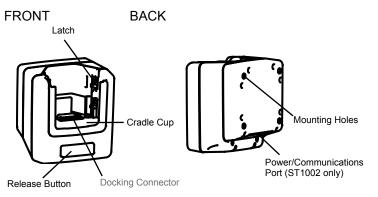

ST1002 CABLE CONNECTIONS

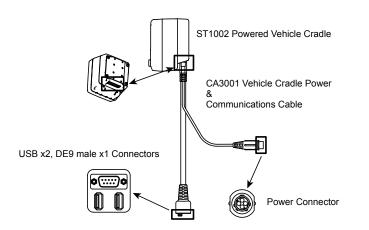

TYPICAL SETUP

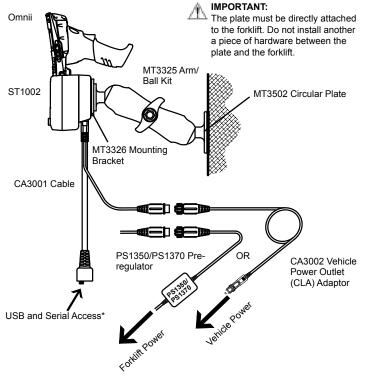

*Note: The serial port is 5 VDC, 1 A maximum power out and is defaulted to off.


To enable power to this port, in your Omnii desktop, go to Control


Panel>Scanners, which opens the Scanner Settings menus. In the Ports menu,
select on for the Power parameter under the COM6 port.

GETTING STARTED


Mount the Cradle to the Bracket and Mounting Systems.

Note: This diagram is for illustration purposes only. Consult the vehicle manufacturer and the Omnii User Manual for mounting guidelines.

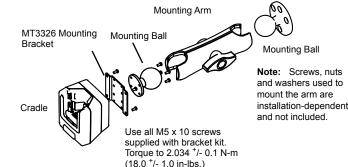

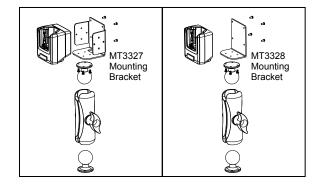




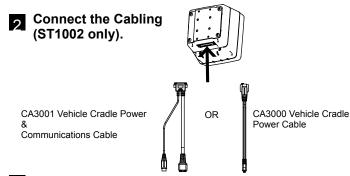

3 Connect to Vehicle Power.


WARNING!: 11-30 V input only, suitable for road vehicles. A preregulator is required for use on forklifts. The PS1350 (15-90 VDC) pre-regulator is recommenderd for such installations. For freezer applications bElow -20° C (-4° F), use only the PS1370 pre-regulator.

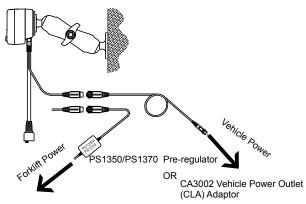

Note: For Vehicle Power Outlet (CLA) Adaptor, replace with same fuse type and ratings

Insert Omnii into the Vehicle Cradle.

Slide Omnii into the cradle, and press firmly downward until it locks into place. Pull up on Omnii to be certain that it is secure. To remove Omnii, press the release button on the front of the cradle until it releases.

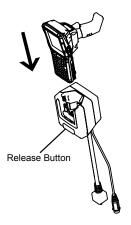

Allow Omnii to charge for 3-4 hours before first use.

Note: Full battery performance is only reached after the first few charge/ discharge cycles.

0 - 40 °C 32 - 104 °F

Omnii Battery Charge LED Behaviour

The far left LED on Omnii indicates charge status.

	Charge LED Behaviour	Function
	OFF	No battery detected.
	Solid Green	Battery charging complete.
	Flashing Green	Charge in progress.
	Flashing Yellow	Battery is not charging due to out-of-temperature conditions.
	Solid Red	Unable to read battery or non Zebra battery.

Zebra reserves the right to make changes to any product to improve reliability, function, or design.

Zebra does not assume any product liability arising out of, or in connection with, the application or use of any product, circuit, or application described herein.

No license is granted, either expressly or by implication, estoppel, or otherwise under any patent right or patent, covering or relating to any combination, system, apparatus, machine, material, method, or process in which Zebra products might be used. An implied license exists only for equipment, circuit, and subsystems contained in Zebra Products.

Warranty

For the complete Zebra hardware product warranty statement, go to: http://www.zebra.com/warranty.



Zebra Technologies Corporation Lincolnshire, NY, U.S.A. http://www.zebra.com

Zebra and the stylized Zebra head are trademarks of ZIH Corp., registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners.

© 2016 Symbol Technologies LLC, a subsidary of Zebra Technologies Corporation. All Rights Reserved.

Omnii
VEHICLE CRADLES

ST1000 & ST1002

QUICK START GUIDE