



EA600 Quick Reference Guide

Important notice on Polymer lithium ion battery

- 1) Charge the battery only with original Unitech power adaptor supplied in the box
- 2) Do not store the device with battery installed for long period of time
- 3) If long period storage is required, remove battery from device.
- 4) During long storage period, maintenance work is required at every 3 months period. During maintenance, discharge the battery completely, and then charge to 60% - 70% (or 3.8V - 3.9V).
- 5) Store battery in dry, cool environment. Temperature should be - 20 to 40 degree Celsius and relative humidity should be 45% to 85%
- 6) Charge battery at 5 to 45 degree Celsius
- 7) Do not operate the device outside the recommended temperature, which is from -20 to 60.
- 8) Do not install a third party battery into Unitech device

Safety precaution

- 1) Do not transport the battery at temperature higher than 65 degree Celsius
- 2) Do not expose battery to fire or heat source
- 3) Do not forcefully install the battery in opposite direction into the device
- 4) Avoid impact and high vibration force on the battery
- 5) Keep battery dry at all time
- 6) Do not use battery that is damaged or appear to have been modified
- 7) Do not use unauthorized power adaptor to charge the battery
- 8) Do not discharge the battery beyond the specification of the battery
- 9) Do not place battery into microwave oven or pressured container
- 10) Do not damage battery with sharp objects
- 11) Do not operate in environment with extreme electrostatic fields or magnetic fields.
- 12) If leakage found in battery, avoid contact with body parts. Should leakage be in contact with body parts, flush with water and immediately seek medical attention
- 13) If battery exhibits unusual behavior like color change, temperature became hot, shape is swollen, remove battery from device and stop using that battery
- 14) If the contact point on the battery is dirty, clean with a dry cloth
- 15) Dispose the battery according local regulation. Recycle if possible.
- 16) Improper usage or storage may cause battery performance to drop, leak, damage, or even escalate to personal safety issue.

Appearance and Buttons

Front view



To turn on device: Hold power button until the device switches on.
To turn off device: Hold power button during operation until the device shows a menu, select "Power off".


To turn off display: Press the power button. Device also turn off the display automatically if left idle for some time. That amount of time can be configure at "Setting→Display→Sleep"

To turn on the display: Press the power button lightly.

Side view



4

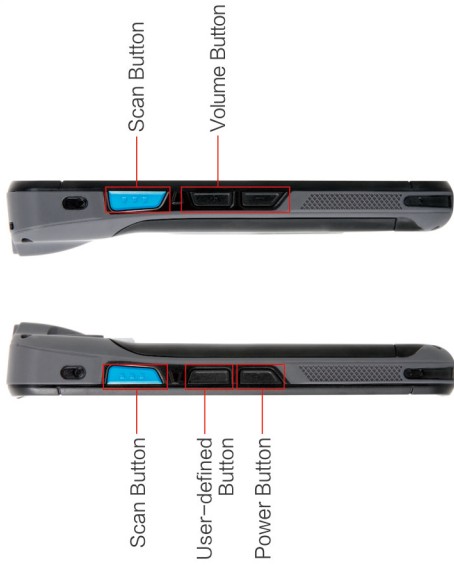

Rear view



Battery Installation


Insert battery in the direction as shown in the picture on the right .
Sit the battery tightly in the corresponding position.

5



Note: Gently rotate the battery cover clip in quarter-turn motion.
Do not apply excessive force.

Charging by USB Data Communication Cradle

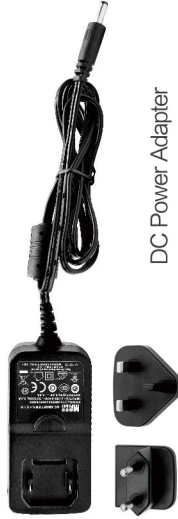

DC Power Adapter

Charging by USB Data Communication Cradle.
Place the device in the USB Data Communication Cradle which comes in the box.



6

When starts to charge battery, the P indication LED of dock will be green. The red C indication LED will turn green after battery is fully charged.

Connect the power cable into the cradle.

P: LED indicates the cradle is operational.

Slot the device into the cradle and take note of the LED change on the device which indicate the charging process

Slot the battery into the cradle as shown in the picture.

C: LED should lit up to indicate charging.

Battery Operation

The device battery is polymer type battery, which should only be charged by using original Unitech power supply.

Metal contact is unavailable or artificial short circuit electrode.

Do not store battery in hot, humid, or corrosive environment.


Do no break or crack battery.

Do not store battery when it is fully charged completely drained.


If device is not used for long period of time, remove the battery from the device, please.

If the battery is missshapen or is found leaking, replace the battery immediately.

Note: The battery should be charged for at least 8 hours before the first use.

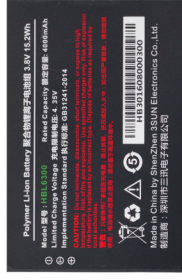

Installing SIM/ TF Card

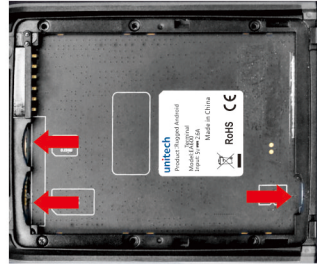

1.Swing open the main battery cover clip by 90 degrees, you can then remove the battery cover.

2.Insert the SIM card or Micro SD/TF card into their corresponding slots in the battery compartment.

Note: You should gently push the SIM/TF card to the correct position without using excessive force.

Note: This document is subject to change without prior notice