

Package

Please make sure the following contents are in the PA760 gift box. If something is missing or damaged, please contact your unitech representative.

The basic package contents


- PA760 Terminal
- Battery
- Hand Strap
- Adapter (with US, EU, UK plugs)
- Quick Start Guide
- USB Type C Cable
- Tray Ejector tool
- Quick Start Guide
- Regulatory Compliance Statements

Optional accessories

- 1-slot Terminal & Battery Charging Cradle
- 1-slot Ethernet & Battery Cradle
- 4-slot Terminal Charging Cradle
- 4-slot Ethernet Cradle
- Bumper or Extended Battery (Depends on model selection)
- Gun Grip

Rugged Handheld Computer


- PA760 -

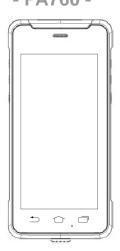


Quick Start Guide

401437G V1.0

Product View (Front / Rear View)

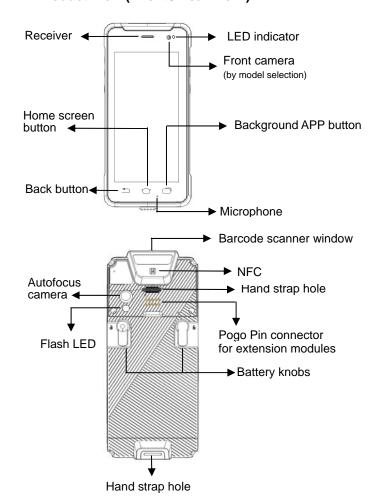


Product View (Left / Right View)

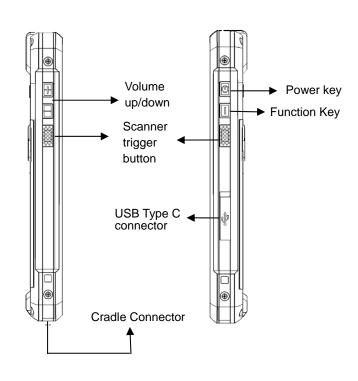




Installing the Battery

  To unlock the battery by turning up the two knobs. And pull the battery up to remove it.



 
 To lock the battery by turning down the two knobs.
Make sure the battery is securely closed, or you may be unable to turn on the terminal.



Using the Micro SD/ Nano SIM Card

The PA760 has 1 x micro SD and 2 x nano SIM card slots inside the battery compartment.

- To unlock the battery by turning the two knobs on the side. And pull the battery cover up to remove it.
- Insert the tip of the tray ejector tool that came with the package or a small bent paperclip into the eject hole.
 Then pull the tray out.

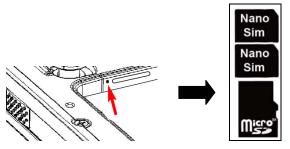

3. Lock the two knobs on the battery.

Turning on the terminal for the first time

It is recommended to fully charge PA760 before first use.

You can now start up your device to set up the languages,

WiFi setting, and date and time.

Checking the LED status

LED	Description
Red Light	■ Battery Charging
	■ Twinkling to indicate battery low
	status(less than 15%)
Green Light	■ Battery Fully charged
	■ Barcode scan good read
Blue Light	Message
All of LEDs can be controlled	If scanner app is running, LED control
by software API	by scanner app.
No LED (Red and Green) display when battery is out(even AC IN)	

Charging the Battery

If the battery has been discharged for several days, you may need to charge for several minutes before powering it on.

When the battery power is too low, make sure to use the power adapter or put into the cradle (strongly recommend) to charge, not the USB type C cable connection with your computer.

Use only the adapter, the USB type C cable and the cradle that came from unitech.

- **CAUTION!** To ensure the unit working properly, please keep all connectors away from the contaminants staying inside of them such as dust, grease, mud, and water. The negligence may cause the unit with no communication, short circuited, overheated and so on.
 - If the connector is damaged, please ensure the connector is being fully repaired before using the unit to avoid causing short circuited.

http://www.ute.com/