

### MS852 Auto Switching



### MS852Plus Auto Switching



### Connecting the Scanner

Connect USB cable to the USB port of a host PC.



### USB Device Type

HID Keyboard\*



CDC (SPP)



### Factory Default



### Display F/W Version



### Auto Sense

Enable Auto Sensing \*



Disable Auto Sensing (Trigger Mode)



### Encoding

Remark: For displaying Traditional Chinese character on your Windows PC, please scan the QR code below to look for corresponding product name and download **Windows registry setting utility for Traditional Chinese input**.

UTF-8\*



Big 5



GB2312



### Good Read

Good Read Beep Enable\*



Good Read Beep Disable



\* : Default Option

Thank you for purchasing the unitech product.  
For other product documentation, please scan the QR code for more information.



### HID Keyboard Character Delay

1 ms\*



5 ms



10 ms



20 ms



50 ms



100 ms



### HID Keyboard Block Delay

10 ms\*



50 ms



100 ms



500 ms



1 Sec.



3 Sec.



### HID Keyboard Case

Auto Trace\*



To Lower



To Upper



### HID Keyboard Language

US English\*



UK English



Swiss



Swedish



French



ALT Mode



Danish



Spanish



Norwegian



Italian



Partial ALT



German



Japanese



\* : Default Option

Thank you for purchasing the unitech product.

For other product documentation, please scan the QR code for more information.

